


Analog Input Module

INSTALL GUIDE


1

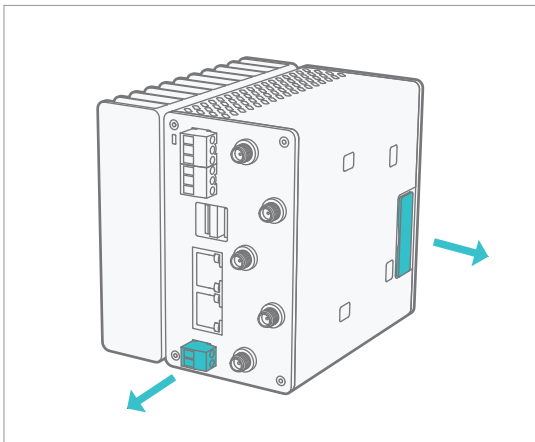

Make sure the base unit is disconnected from power before installing modules. Adding or removing modules while the base unit is powered could damage the unit.


Remove the cap from the backplane connector on the base unit.

2

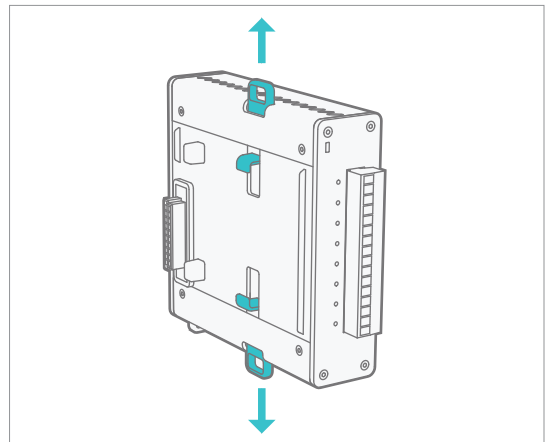

Pull out the latches on top and bottom of the module.

3

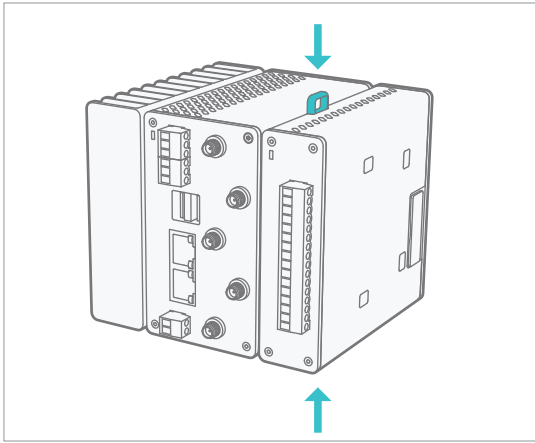

Attach the module to the base unit, docking the 20-pin connector, then push in the latches at top and bottom.

Connect the base unit to power.

Go to kb.samsara.com to finish setting up your device.


WARNING – EXPLOSION HAZARD. DO NOT DISCONNECT WHILE THE CIRCUIT IS LIVE OR UNLESS THE AREA IS FREE OF IGNITIBLE CONCENTRATIONS.



AVERTISSEMENT – RISQUE D'EXPLOSION. NE PAS DÉBRANCHER PENDANT QUE LE CIRCUIT EST SOUS TENSION OU À MOINS QUE L'EMPLACEMENT NE SOIT EXEMPT DE CONCENTRATIONS INFLAMMABLES.

The IG41 AI Module accepts 0-10V or 4-20mA analog inputs.

ANALOG CURRENT INPUT CIRCUIT

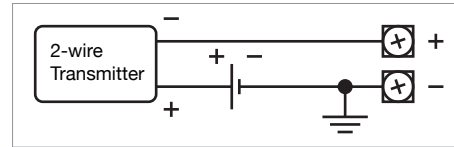

ANALOG CURRENT OR VOLTAGE INPUT CIRCUITS

